

Function 17: System speed-dial

Up to 100 system speed dial names and associated numbers can be stored, in location numbers 600–699, for access by any station. A user can initiate a system speed-dial by dialing the speed dial location number or by accessing the name through the Esi-Dex feature. In Function 32, access to system speed-dial can be denied to individual stations (see page C.1).

Note: System speed-dialing overrides toll restrictions (Function 32, page C.1).

1. Enter the 3-digit location number to program,
2. Enter a **ten-character** name (see “Entering alphanumeric characters,” page A.4).
3. Enter the number to be dialed (including the line group 9, 8, or 71–76). Press the left scroll key (▼) to delete any character or digit entered in error. Here’s an example:

1.	2.	3.
Speed-dial number	Name	Number
601	AUTO RENTL	915552221212

The number dialed in Step 3 can be up to 30 digits long **including** the following special codes:

Code	What it produces
#	# DTMF tone
*	* DTMF tone
F	Flash hook
P	2-second pause

Use the ▲ scroll key to enter special characters; use the ▼ scroll key to backspace. Press # to confirm the inserted character and continue. Press ## to complete the entry.

Example: To create a System Speed Dial number that dials 9, then 972-555-5644, then pauses for four seconds and finally dials #104, enter:

9 9 7 2 5 5 5 6 4 4 (then scroll to) **P #** (then scroll to) **P #** (then scroll to) **## 1 0 4 #**

Deleting a speed dial number

To delete an entire speed dial number and name, delete the location number (**6 X X**) by pressing **HOLD** or the left scroll key (▼) during Step 1 in the speed-dialing procedure described above.